

User Manual

Tronsmart Encore S4 ANC BLUETOOTH HEADPHONES

Model: S4


Thank you for choosing the Tronsmart Encore S4 ANC Bluetooth Headphones. Please read the user manual carefully and keep it for future reference. If in doubt, please contact our customer support team by email at support@tronsmart.com.

The following items are included:

- USB cable
- Ear cushions

Product Review

1. Volume + / Previous Song
2. Multifunction button
3. Volume - / Next Song
4. Charge port
5. ANC switch (Active Noise Cancelling)
6. Battery
7. Microphone
- LED indicator

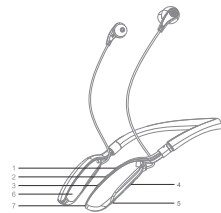

- 01 -

Basic operation

Status indicator

Instructions	LED status	Voice prompts
Power on	Solid blue, approximately 1 second	Power on
Power off	Solid red, approximately 2 seconds	Power off
Standby	Blinking blue once every 8 seconds	/ Standby Mode
Pairing	Blinking red and blue alternately	Pairing Mode
Incoming call	Blinking blue quickly	Chime
Battery low	Blinking red	Battery low
Charging	Solid red while connected and in Charging Mode Solid blue after fully charged / Charging complete	
Power on	Press and hold the Multifunction button for approx. 2 seconds. The earphone will announce, "Power on" and the LED will flash blue once.	
Power off	Press and hold the Multifunction button for approx. 5 seconds. The earphone will announce, "Power off" and the LED will flash red once.	
Clear paired list	Make sure the earphone is turned off, press and hold the Multifunction button until the LED indicator flashes red and blue alternately (About 7 seconds), then release the Multifunction button. Your paired list has now been wiped clean and returned to factory original settings.	

- 02 -

ANC (Active Noise Cancelling)

ANC On

Turn the dial to the, "down" position to switch ANC on. ANC light stays solid blue.

ANC Off

Turn the dial to the, "up" position to switch ANC off. ANC blue light turns off.

Call

Answer a call

Press the Multifunction button for Volume "+" or Volume "-" once.

 
Reject a call

Press and hold the Multifunction button for approx. 2 seconds.

End a call

Press the Multifunction button once.

End current call and answer a new call
While on a call, press the Multifunction button once to answer an incoming call and to end the current call.



- 03 -

Place current call on hold and answer new call
While on a call, double press the Multifunction button to place the current call on hold and to answer the incoming call.

Reject incoming call while in use

While on a call, press and hold the Multifunction button for about 2 seconds to reject any incoming call and keep the current call active.

Mute On/Off

Press the Volume "-" button for approx. 2 seconds to turn the mute function On/Off.

Switch between the headphone talking and cellphone talking

Press the volume button "+" for approx. 2 seconds during a call to switch between the headphone's microphone talking and the cellphone's microphone talking. To reverse from cellphone back to headphone, repeat the steps.

Redial the last number called

Double press the Multifunction button while in standby or music mode. The mobile phone will redial the last number called.

- 04 -

Music

(Please note: Media Player support is required for use)

Music play / pause

Press the Multifunction button once to play or to pause music. (Some phones may require you to start the media player first).

Track backward / forward

Press the Volume "-" for 2 seconds to skip backward to the previous track or press Volume "+" for 2 seconds to skip forward to the next track.

Switch Music and Call

When a call is received while music is playing, the music will automatically pause to allow you to answer or ignore the incoming call. Once the incoming call is ended or refused, the music will then resume.

- 05 -

Safety and care

Using earphones at high volumes for extended periods of time will result in permanent hearing damage. It is recommended that listeners keep volume levels low to moderate at all times for your safety.

Do not use while driving a car, cycling, operating heavy machinery, or performing other activities that require the user to hear their surrounding sounds. It is dangerous and can lead to injury.

Do not use any corrosive cleaners or oils to clean the earphone.

If the earphone comes in contact with liquids, quickly wipe away. If submerged in water, do not turn the earphone on until completely dried. This may result in electrical shock or malfunction. Please Note: Liquid submersion voids the warranty.

Keep the earphone and packaging out of the reach of small children.

- 06 -

Tronsmart

SHENZHEN VALUE IN ACTION TECHNOLOGY CO., LTD.
A3 Hekan Industrial Building, 41# Wuhe Avenue,
Bantian, Longgang District, 518129 Shenzhen, China
Email: support@tronsmart.com
800-270-1082 (USA & Canada)
+86-755-23603740 (Global)



www.tronsmart.com